




TOP AND CABINET PARTS

For Models: LSQ9200PQ1, LSQ9200PT1
(Designer White) (Biscuit)

AUTOMATIC
WASHER

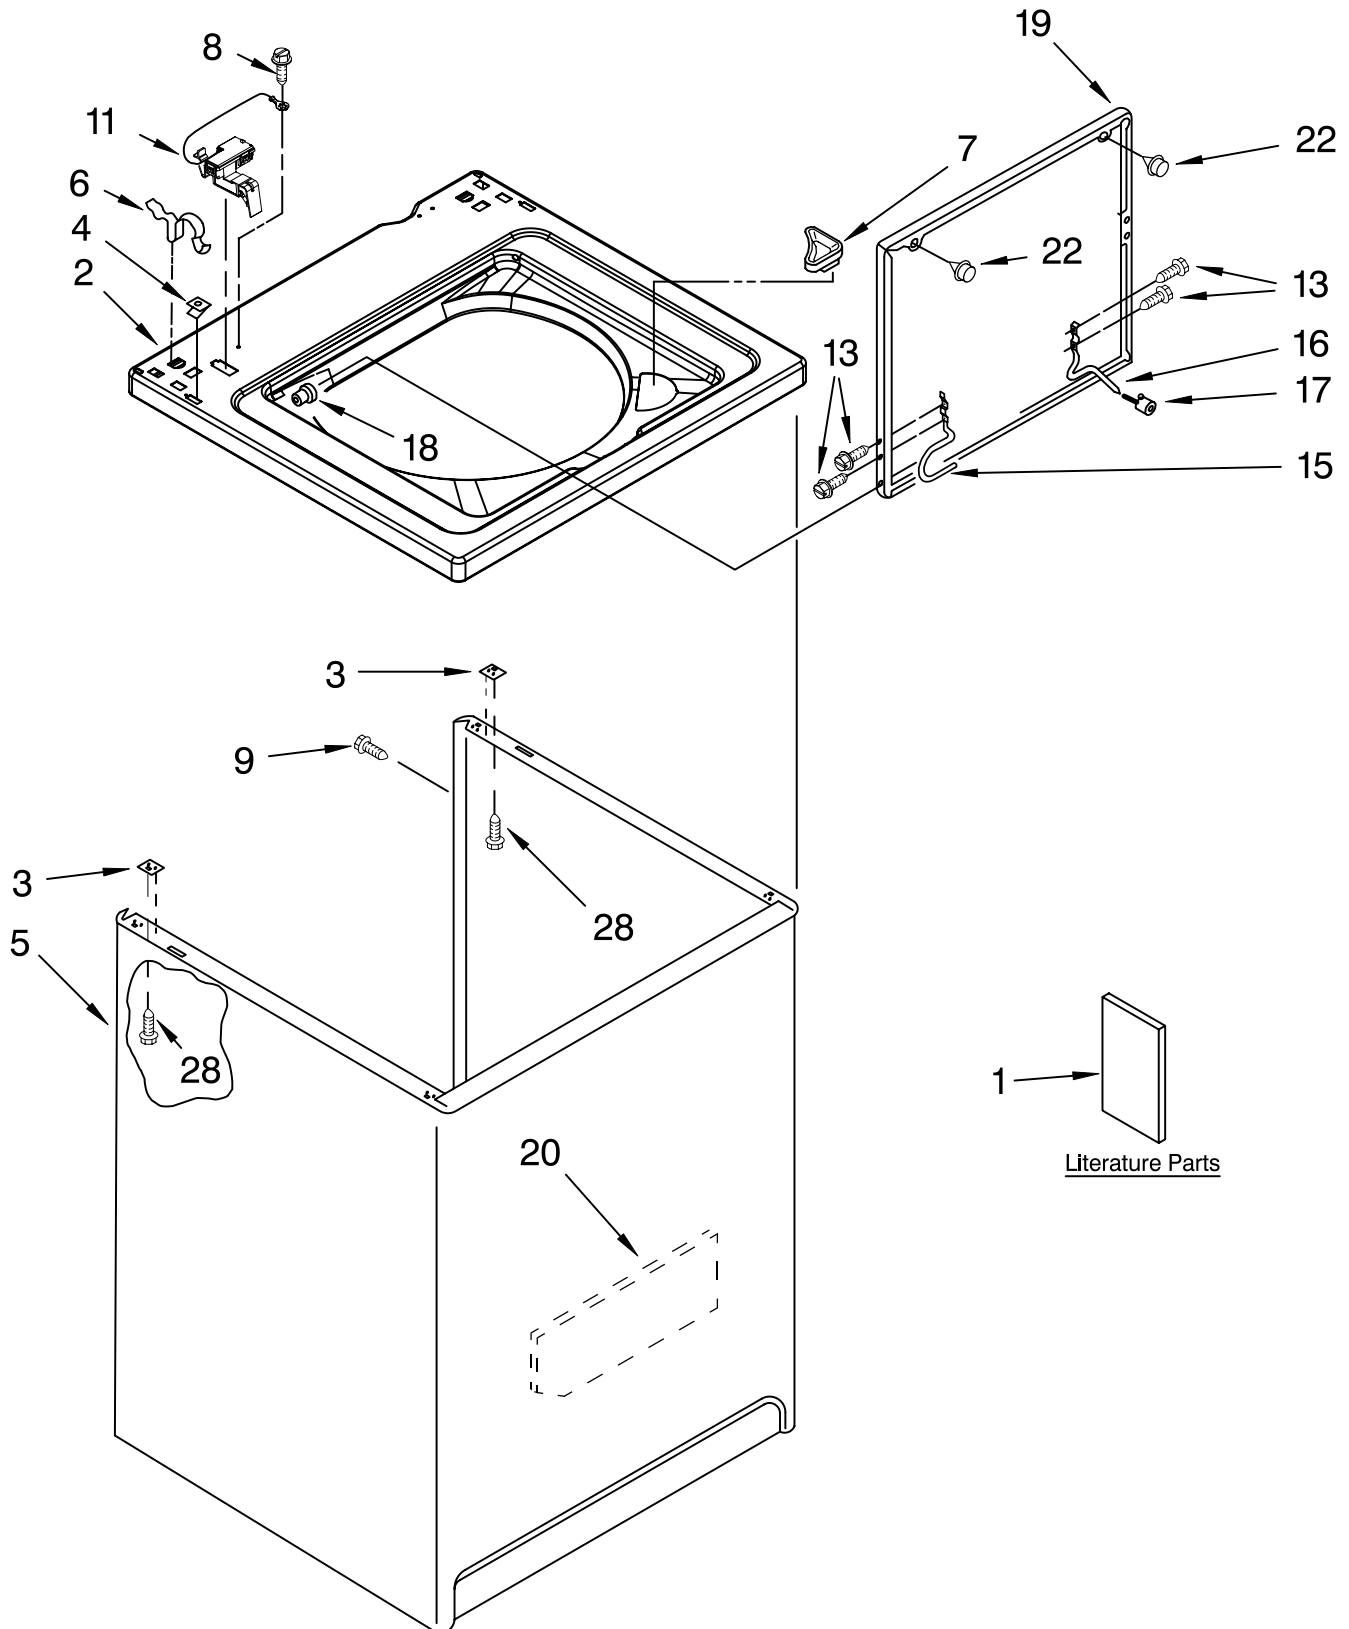

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CABINET PARTS

For Models: LSQ9200PQ1, LSQ9200PT1
(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	3957165	Installation Instructions
	3955907	Feature Sheet
	3955869	Use & Care Guide
	3957474	Energy Guide
	8557303	Wiring Diagram


Following May Be Purchased

DO-IT-YOURSELF REPAIR MANUALS

	4313896	Manual, Washer Do-It-Yourself
2		Top
	8318064	White
	8318066	Biscuit
3	62750	Spacer, Cabinet To Top (4)
4	357213	Nut, Push-In (2)
5		Cabinet
	63424	White
	3954357	Biscuit
6	62780	Clip, Top & Cabinet & Rear Panel (2)
7	3362952	Dispenser, Bleach
8	3351614	Screw, Ground
9	3357011	Screw, 10-16 x 1/2
11	8318084	Switch, Lid
13	3351355	Screw, Lid Hinge Mounting (4)
15	8318088	Hinge, Lid (L.H.)
16	54583	Hinge, Lid (R.H.)
17	19119	Bumper, Lid Hinge
18	21258	Bearing, Lid Hinge (2)
19		Lid
	8542387	White
	8542384	Biscuit
20	3976348	Cabinet- Sound Damper
22	9724509	Bumper, Lid (2)
28	3390631	Screw, 10-16 x 3/8 (4)

CONTROLS AND REAR PANEL PARTS

For Models: LSQ9200PQ1, LSQ9200PT1
(Designer White) (Biscuit)

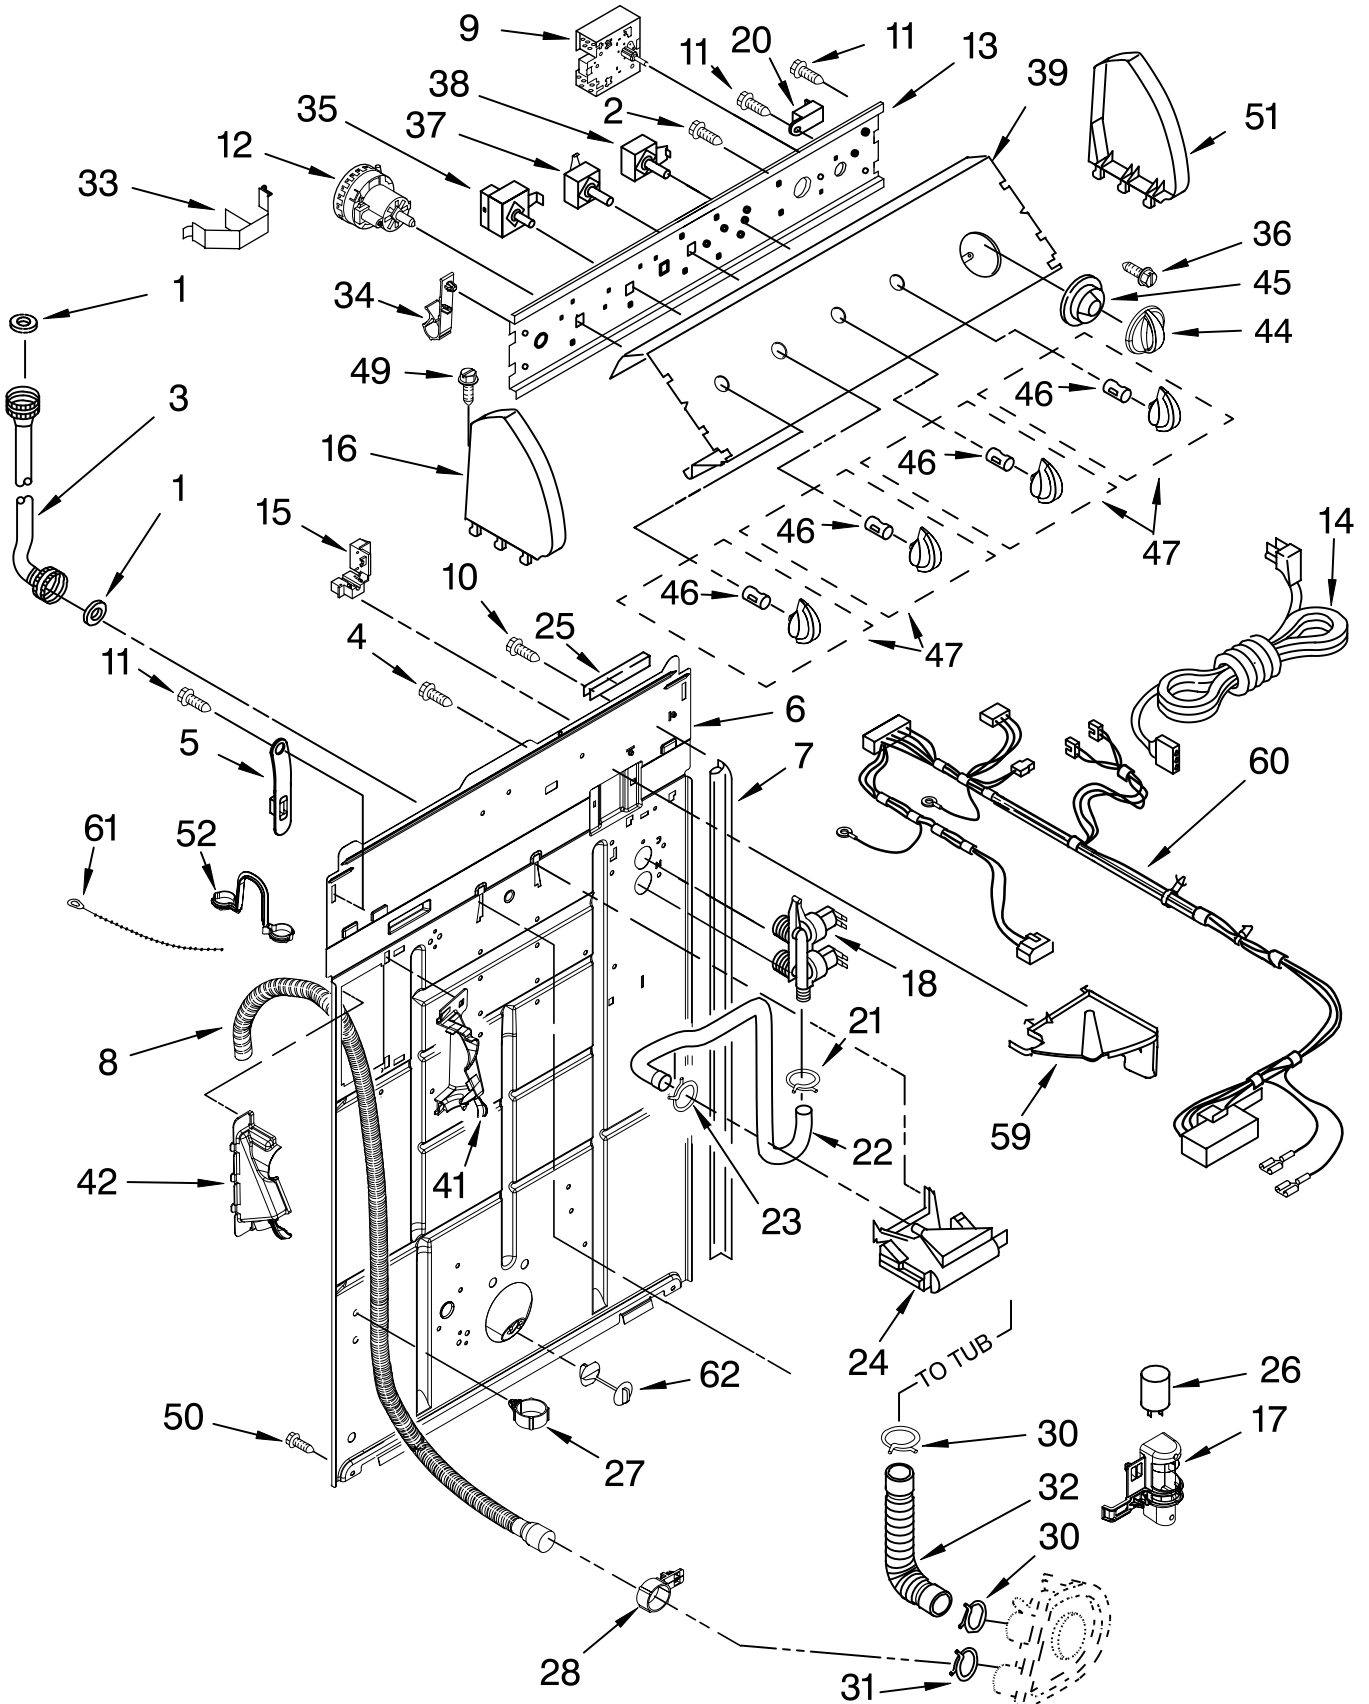

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROLS AND REAR PANEL PARTS


For Models: LSQ9200PQ1, LSQ9200PT1
(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3976300	Washer, Water Inlet Hose (4) (1-1/16 x 5/8)	17	8318046	Clip, Capacitor	41	8541669	Bucket, Drain Hose (Left Half)
2	3400073	Screw, Ground	18	3952164	Valve, Water Mixing	42	8541658	Bucket, Drain Hose (Right Half)
3		Hose, Water Inlet (2)	20	694419	Mini-Buzzer	44		Knob, Timer
	8571377	Blue Coupler	21	301958	Clamp, Hose		8544943	White
	8571378	Red Coupler	22	8541607	Hose, Vacuum Break		8544944	Biscuit
4	9740848	Screw, 8-18 x 1/2	23	370450	Clamp, Hose	45		Dial, Timer
5	8568314	Strap, Console (2)	24	387606	Break, Vacuum		8544947	White
6	8318015	Panel, Rear	25	303294	Edge Protector		8544948	Biscuit
7	62747	Pad, Rear Panel	26	661606	Capacitor, Motor Start	46	8536939	Clip, Knob
8	8559373	Drain Hose Assembly (Includes Items 27 & 28)	27	8541667	Clamp, Hose	47		Knob, Control
9	8557301	Timer, Control (60 Hz.) (Motor Not A Service Part)	28	8541668	Clamp, Hose		8544935	White
10	3351614	Screw, Ground	30	3363366	Clamp, Hose		8544936	Biscuit
11	90767	Screw 8-18 x 3/8	31	8317496	Clamp, Hose	49	388326	Screw, 8-18 x 1.25 (Panel to Top)
12	3366847	Switch, Water Level	32	3951449	Hose, Pump To Tub (Includes #30)	50	62863	Screw, 10-16 x 3/8
13	3948608	Bracket, Control	33	8055003	Clip, Harness & Pressure Hose	51		Cap, End (R.H.)
14	661661	Cord, Power (Includes Item 15)	34	8317975	Retainer, Harness		8271359	White
15	3952821	Strain Relief, Power Cord	35	661612	Switch, Water Temperature		8271362	Biscuit
16		Cap, End (L.H.)	36	3400818	Screw, Timer Mounting	52	8541672	U-Bend, Drain Hose
	8271365	White	37	3949180	Switch, Rotary	59	8539874	Shield, Suds
	8271368	Biscuit	38	3949187	Switch, Rotary	60	3957023	Harness, Wiring (For Detail See Pages 9 & 10)
			39		Panel, Console	61	3347868	Cable Tie
				3956580	White	62	8519200	Support, Rear Panel
				3956581	Biscuit			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

AGITATOR, BASKET AND TUB PARTS

For Models: LSQ9200PQ1, LSQ9200PT1
(Designer White) (Biscuit)

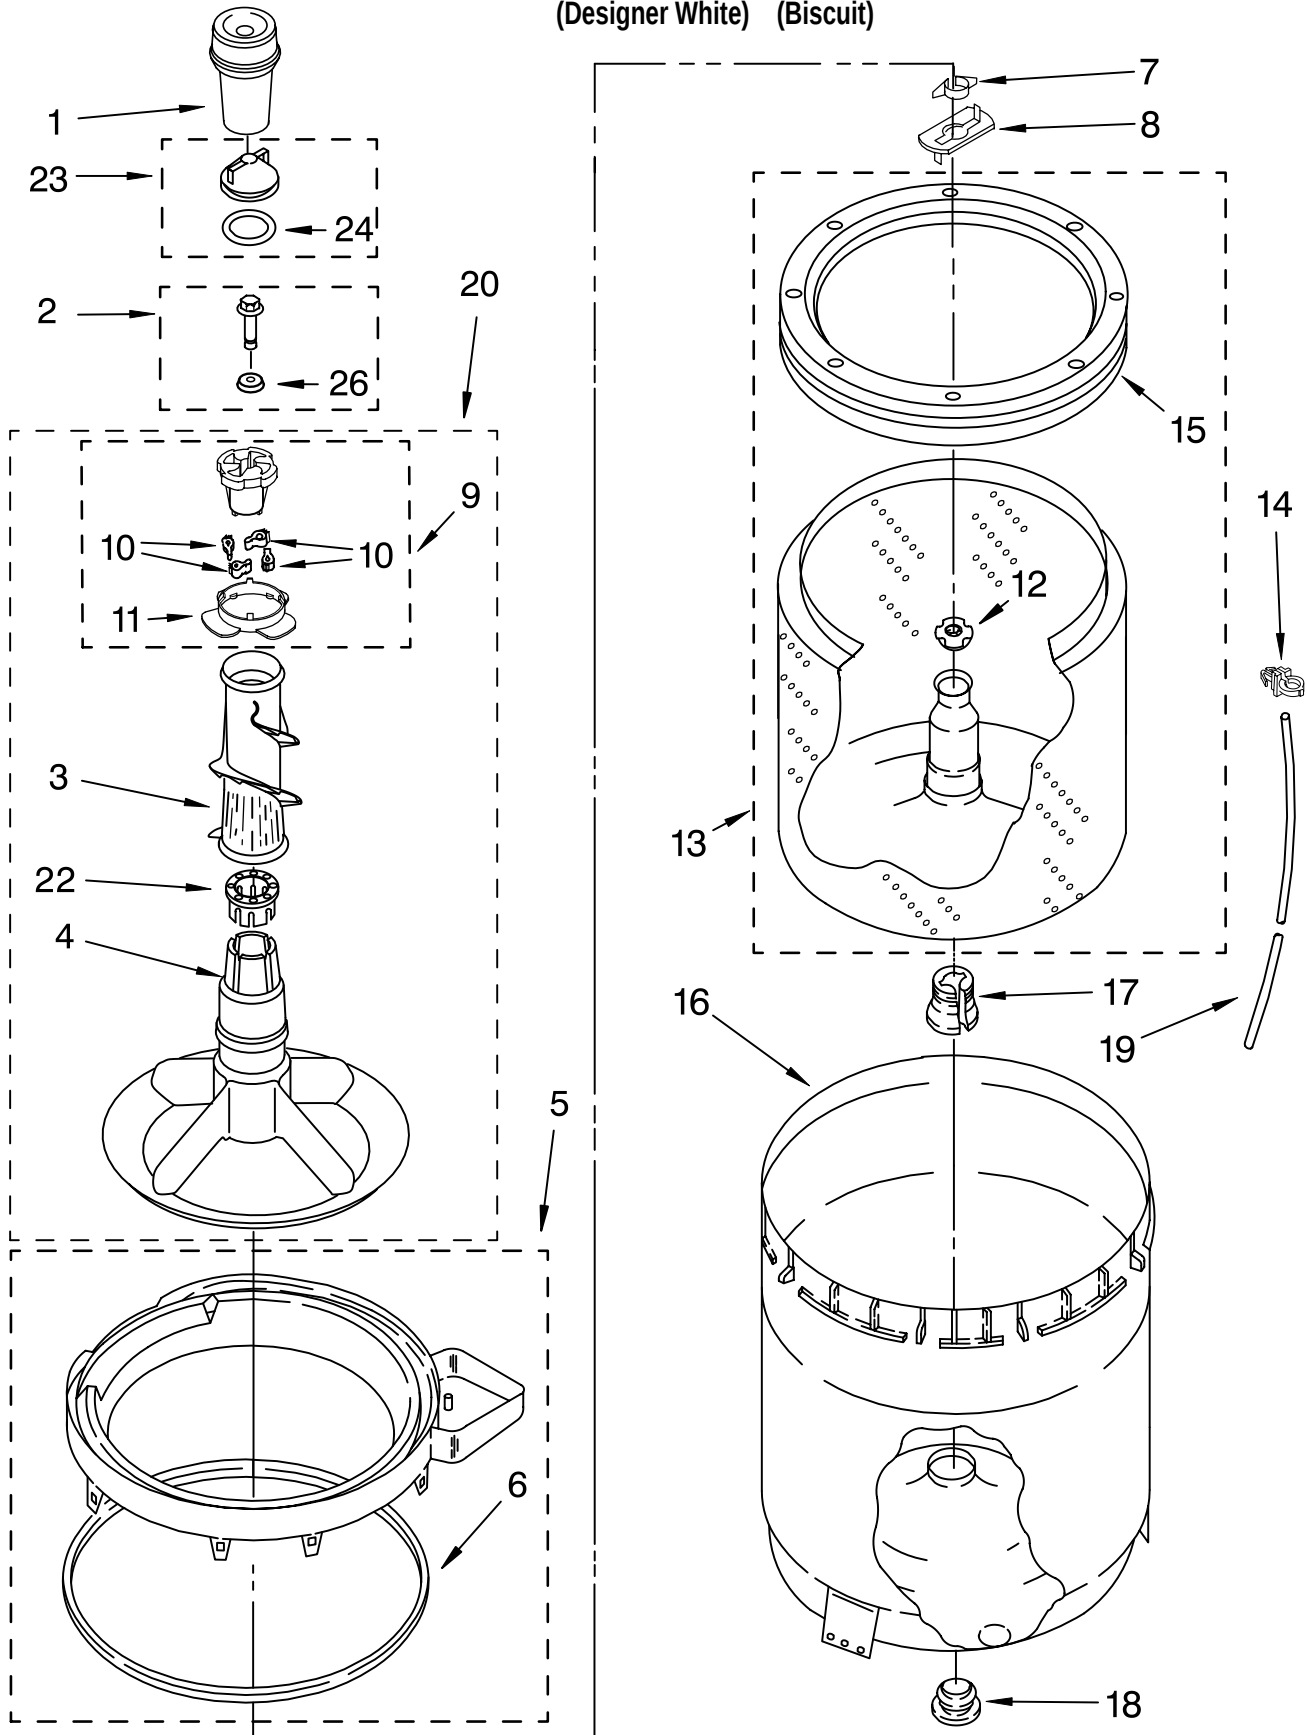

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

AGITATOR, BASKET AND TUB PARTS


For Models: LSQ9200PQ1, LSQ9200PT1
(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	63580	Dispenser
2	358237	Screw & Washer (5/16-24 x 1)
3	3348752	Clothes Mover
4	3347288	Agitator
5	8528150	Tub Ring & Gasket
6	3976308	Gasket, Tub Ring
7	3354845	Clip, Agitator
8	3355921	Washer, Agitator
9	3363663	Cam Driven
10	3366877	Dog, Agitator Clutch (4)
11	3363661	Bearing-Driven Cam
12	21366	Nut, Spanner
13	8526016	Basket & Balance Ring
14	2219077	Clip, Pressure Switch Hose
15	8519788	Balance Ring
16	63849	Tub
17	389140	Block, Basket Drive
18	383727	Gasket, Centerpost
19	3347780	Hose, Pressure Switch
20	3348117	Agitator (Complete)
22	3350389	Spacer, Thrust
23	3354733	Cap, Barrier
24	3348855	Seal, Inner Cap
26	3949550	Washer

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MACHINE BASE PARTS


For Models: LSQ9200PQ1, LSQ9200PT1
(Designer White) (Biscuit)

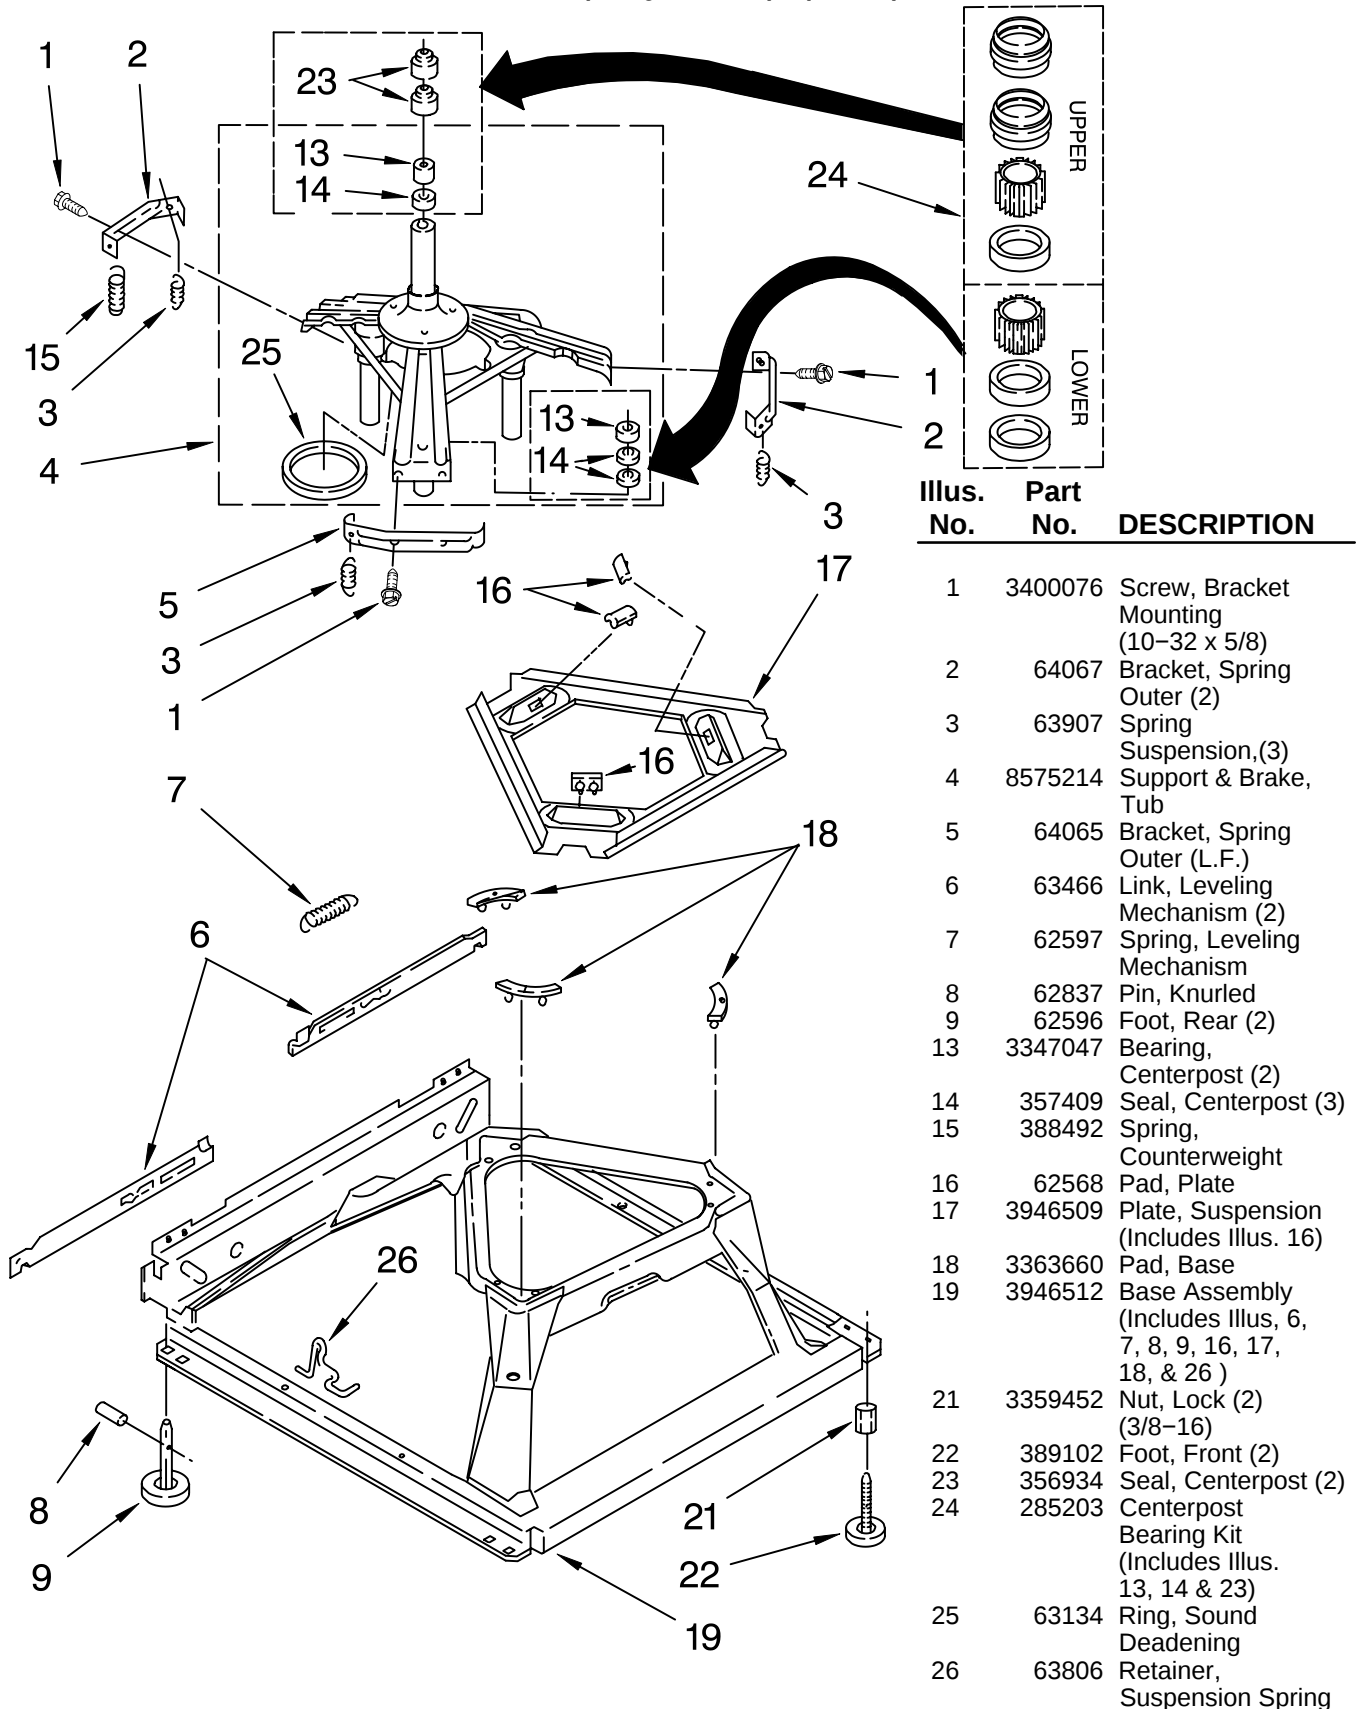

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS

For Models: LSQ9200PQ1, LSQ9200PT1
(Designer White) (Biscuit)

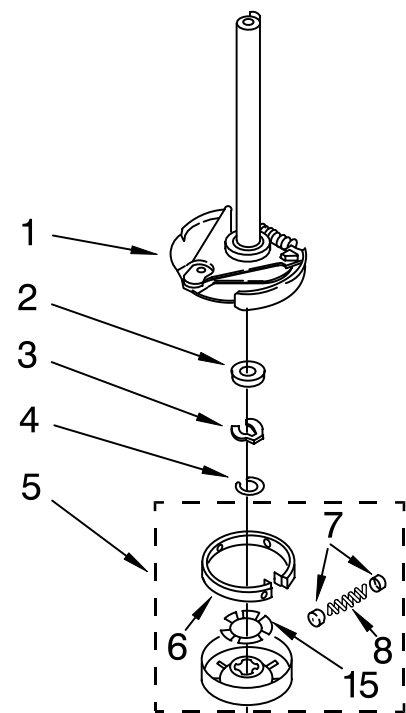

Illus. No.	Part No.	DESCRIPTION
1	388952	Brake & Drive Tube (Complete) (Refer To Page 11 For Further Breakdown)
2	63292	Washer, Spin Tube Thrust
3	62697	Ring, Spin Tube Support
4	63283	Ring, Retainer
5	3951311	Clutch (Complete)
6	3951308	Band & Lining, Clutch (Includes Illus. 7 & 8)
7	62646	Cap, Clutch Spring (2)
8	3946792	Spring, Clutch
9	3360630	Gearcase (Complete) (Refer To Page 12 For Further Breakdown)


Illus. No.	Part No.	DESCRIPTION
10	3357334	Screw, Gearcase To Base (3)
11	62611	Plate, Motor Mount To Gearcase
12	62691	Grommet, Motor (4)
13	285753	Coupling, Motor & Isolation
15	3355454	Clip, Anti-Rattle
16	3400516	Screw
17	3349637	Retainer, Motor (2)
18	3362089	Shield, Tub To Motor
19	8528157	Motor, Main Drive
20	3952056	Switch, Main Drive Motor
21	8546127	Retainer, Pump (2)
22	3363394	Pump (Complete)
23	3387485	Screw, 10-16 x 5/8
24	3946532	Shield, Motor

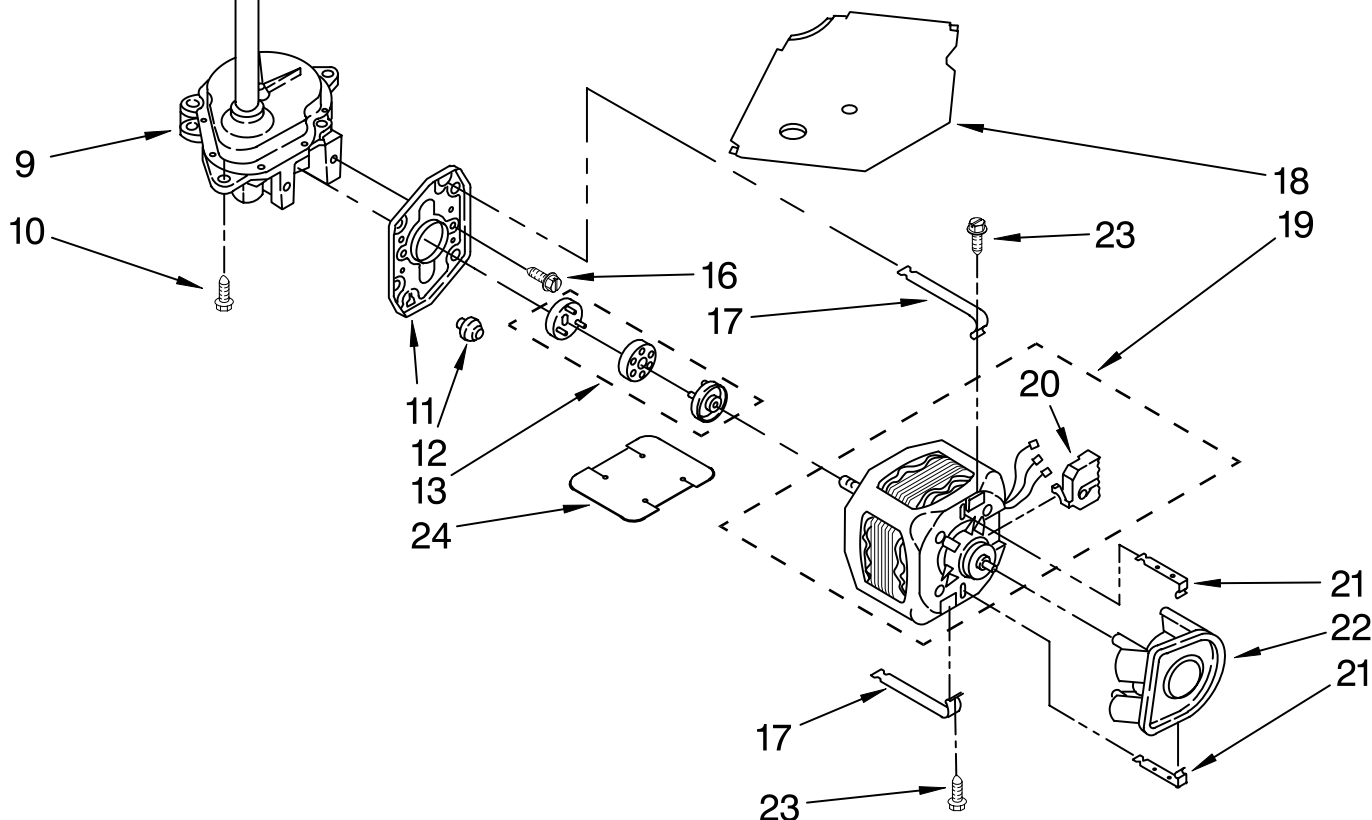

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Models: LSQ9200PQ1, LSQ9200PT1
(Designer White) (Biscuit)

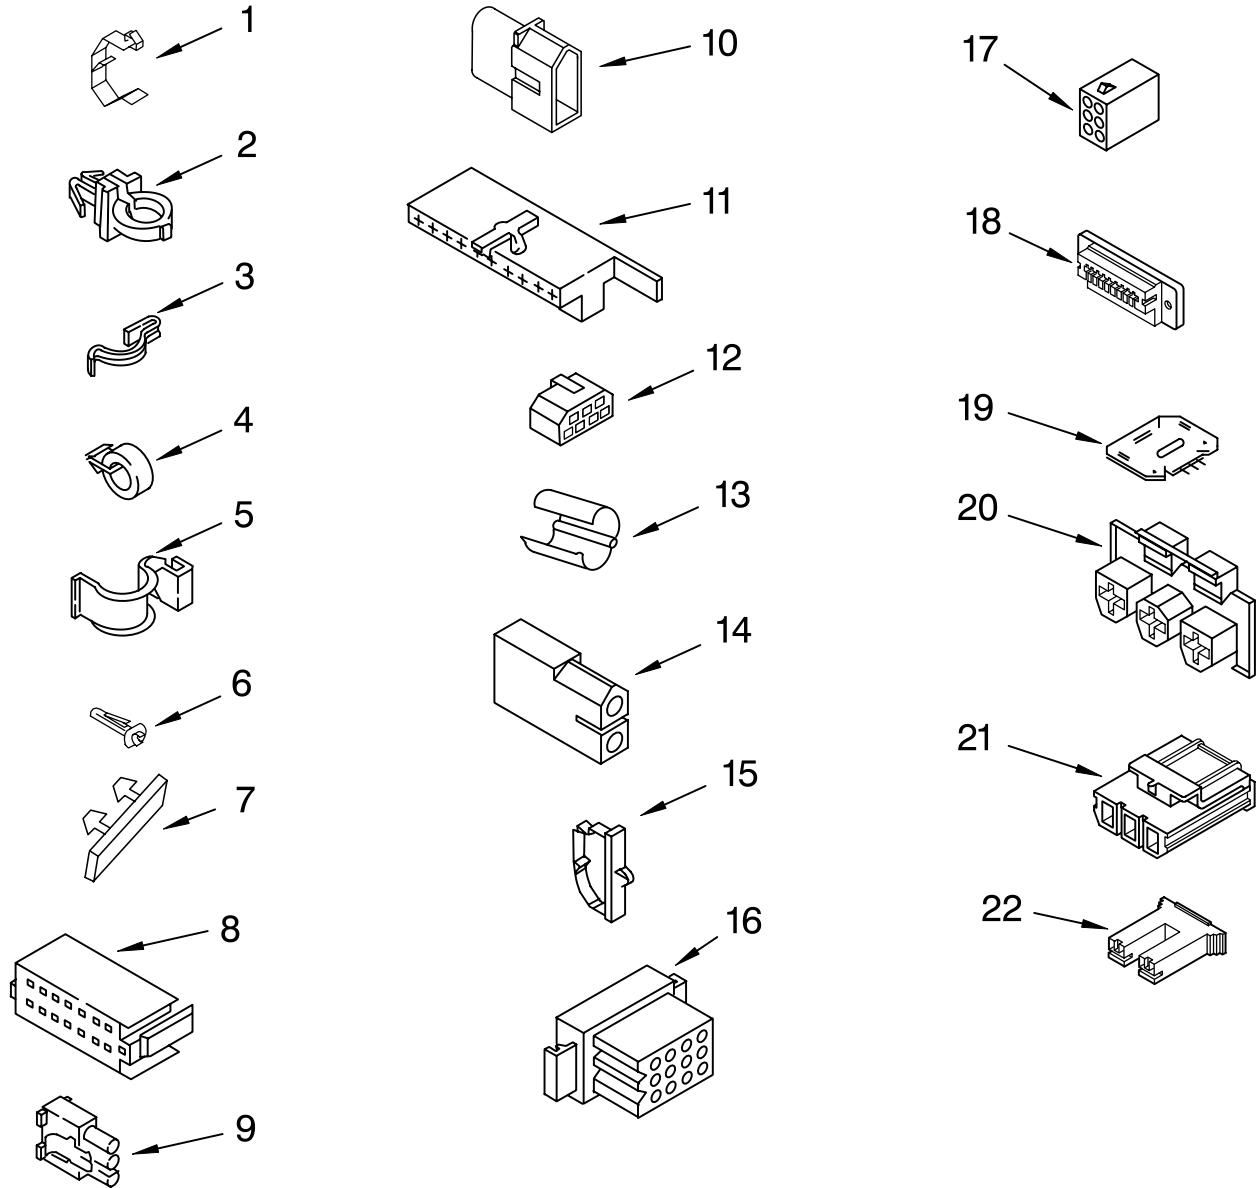

WH2I

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Models: LSQ9200PQ1, LSQ9200PT1

(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3349557	Clip, Harness	10	353424	Plug, Terminal (3-Way) (Power Cord) (Use Term.94613)	17	3347730	Receptacle (6-Way) (Use Term. 94613)
2	388498	Clip, Harness				18	3349494	Connector, Etc
3	3347812	Clip, Harness				19	3407125	E.T.C. Control
4	3352501	Clip, Harness	11	62505	Block, Disconnect (Motor 2 Speed) (Use Term.352088)	20	3948617	Connector (T.P.A.) (3-Circuit) (Lid Switch)
5	90016	Clip, Harness	12	3347243	Block, Disconnect (Use Term. 352088)	21	3360056	Connector (T.P.A) (3-Circuit) (Pressure Switch)
6	3390496	Clip, Harness	13	63523	Protector	22		Block, Connector
7	389379	Retainer, (Suds Models)	14	717252	Connector (2-Way) (Use Term.94614)		3354925	Cold Valve
8		Timer, Block Disconnect					3354926	Hot Valve
	3948614	White	15	3352944	Clip, Harness			
	352089	Black	16	3390423	Block, Disconnect (12-Way) (Timer) (Use Term. 94613)			
9	62889	Receptacle, Terminal (3-Way) (Lid Switch) (Use Term.94613) Or 94614.)						


**FOR COMPLETE WIRING HARNESS REFER TO
CONTROL AND REAR PANEL PARTS PAGE**

WH2I

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BRAKE AND DRIVE TUBE PARTS

For Models: LSQ9200PQ1, LSQ9200PT1
(Designer White) (Biscuit)

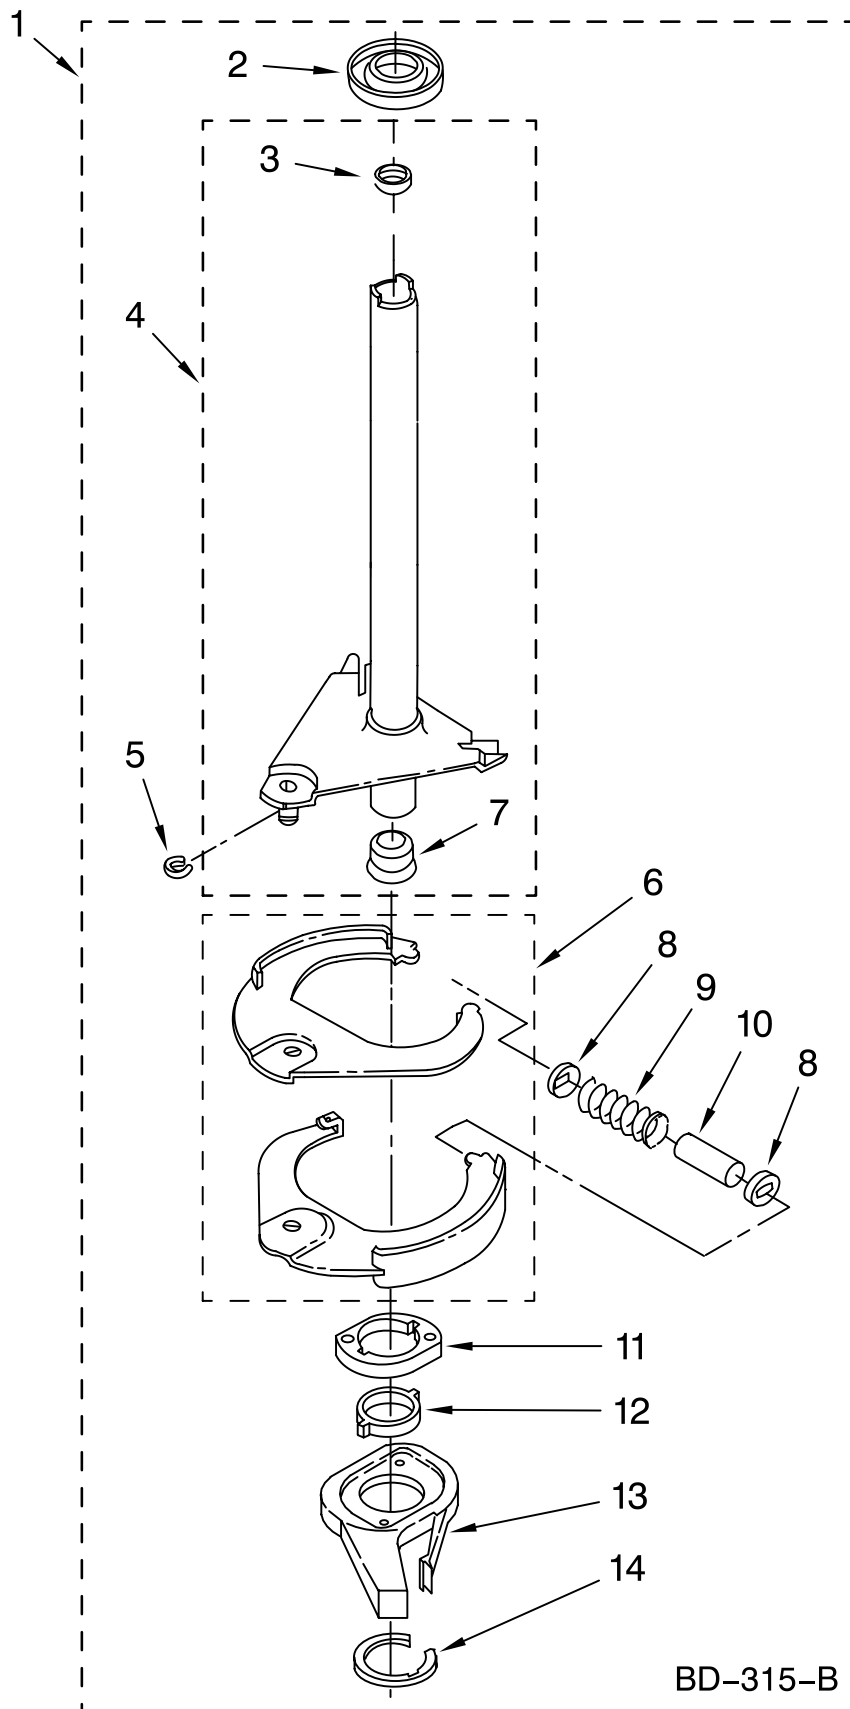

Illus. No.	Part No.	DESCRIPTION
1	388952	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
3	356427	Seal, Drive Tube
4	64027	Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9)
5	64035	Ring, Retaining
6	64232	Shoe, Brake (2)
7	62703	"T" Bearing, Spin Tube
8	3353956	Cap, Brake Spring (2)
9	387806	Spring, Brake
10	3355360	Sleeve, Brake Spring
11	661516	Cam, Brake Release
12	63022	Sleeve, Cam
13	64194	Driver, Brake Cam
14	90368	Ring, Retaining

FOLLOWING PARTS
NOT ILLUSTRATED


285208 Lubricant
(Use Only In
Brake Shoe
Assembly On
Roller & Pin)

BD-315-B

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

GEARCASE PARTS

For Models: LSQ9200PQ1, LSQ9200PT1
(Designer White) (Biscuit)

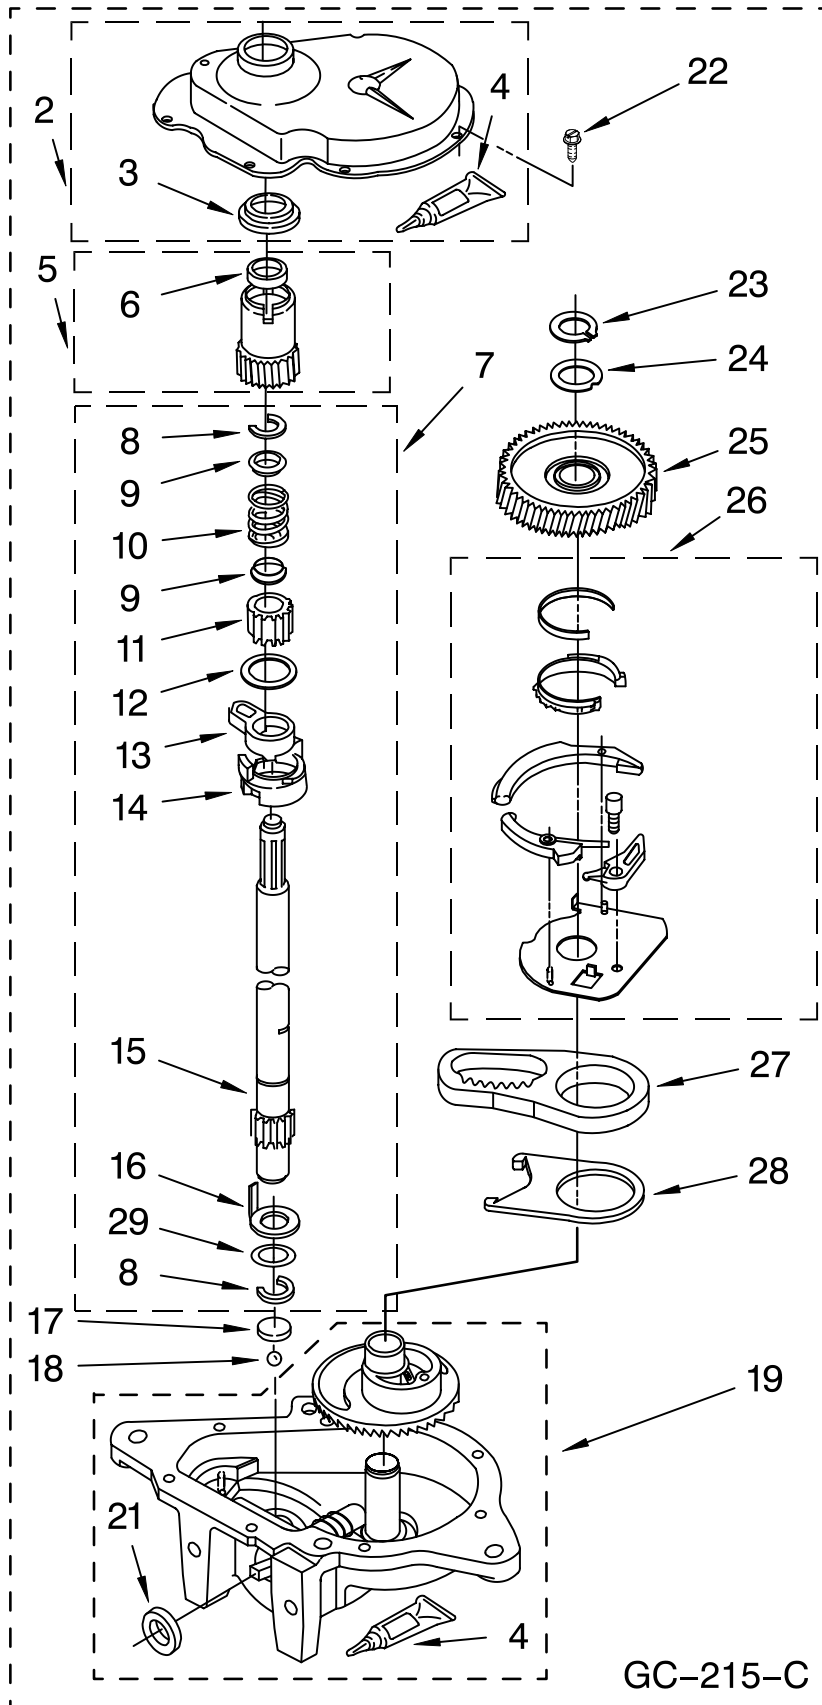


Illus. No.	Part No.	DESCRIPTION
1	3360630	Gearcase (Complete)
2	285202	Cover, Gearcase
3	3349985	Seal, Gearcase Cover
4	285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
5	63320	Pinion, Spin (Includes Illus. 25)
6	356427	Seal, Spin Pinion
7	389387	Shaft, Agitator (Complete)
8	90369	Ring, Retaining (2)
9	62677	Retainer, Spring
10	62676	Spring, Agitate
11	63273	Gear, Agitate (Includes 15 and 29)
12	62619	Washer, Agitate Gear
13	62580	Cam Follower (Includes 14)
14	62581	Cam, Agitate (Includes 13)
15	285509	Shaft, Agitator (Includes 11 and 29)
16	62618	Washer, Cam Thrust
17	16018	Bearing, Thrust
18	85529	Ball, Bearing
19	389230	Bottom and Pinion, Gearcase
21	285352	Seal, Thrust Plug
22	3351614	Screw, Gearcase Cover, Mounting (8) (10-24 x 3/8)
23	3362552	Ring, Retaining
24	285735	Washer Kit, Thrust
25	62570	Gear, Spin
26	388253	Neutral Assembly
27	3349296	Rack, Connecting
28	62621	Actuator, Shift
29	388815	Washer, Intermediate

GC-215-C

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WATER SYSTEM PARTS

For Models: LSQ9200PQ1, LSQ9200PT1
(Designer White) (Biscuit)

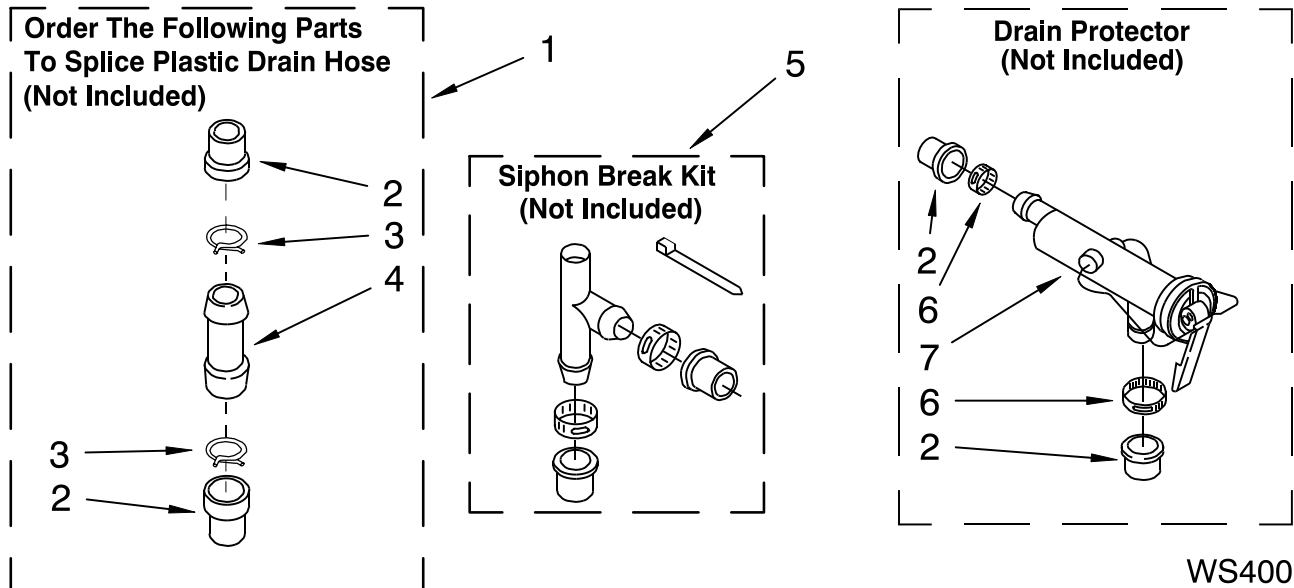


Illus. No.	Part No.	DESCRIPTION
1	285442	Connector Kit, Plastic Drain Hose
2	285321	Sleeve Kit, (Contains 2 Sleeves)
3	370447	Clamp, Hose
4	16272	Connector, Straight
5	285320	Siphon Break Kit (Not Included)
6	65349	Clamp, Hose
7	367031	Drain Protector (Not Included)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models: LSQ9200PQ1, LSQ9200PT1
(Designer White) (Biscuit)

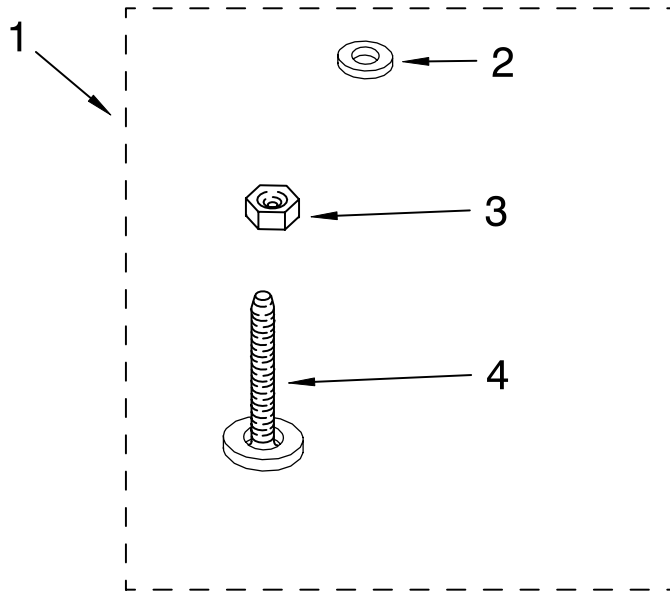

Illus. No.	Part No.	DESCRIPTION
1	3957361	Miscellaneous Parts Bag
2	3976300	Washer, Water Inlet Hose (4) (1-1/16 x 5/8)
3	3359452	Nut, Lock (2) (3/8-16)
4	389102	Foot, Front (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: LSQ9200PQ1, LSQ9200PT1
(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

PAINT, TOUCH-UP (1/2oz.)

72017 White
4392899 Biscuit

PAINT, PRESSURIZED SPRAY (12 oz.)

350938 Primer, Gray
350930 White
4392901 Biscuit

PAINT, BULK (1 qt.)

799344 White (Uncut)
4392900 Biscuit (Uncut)

OIL

350572 Oil, Gearcase
(16 Oz.)

LUBRICANT

285208 Lubricant (Use
Only in Brake
Shoe Assembly
On Roller and
Pin)

SEALER

285195 Sealer, Gasket
(.20 Fl. Oz.) (6 ml)

ACCESSORY PARTS

367031 Drain Protector
285320 Siphon Break Kit

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST